




# Guardrail Assembly

Tool required: #2 Robertson screwdriver

Parts included:

- 2 boards
- 2 steel brackets
- 8 screws

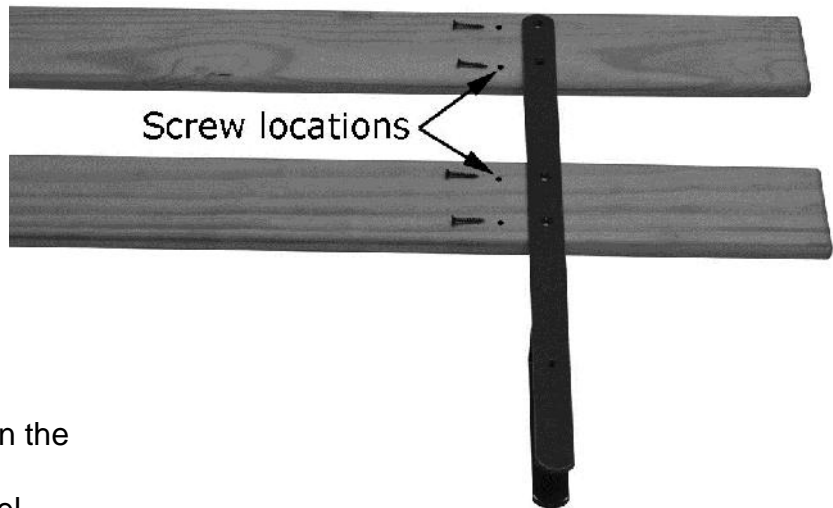

- Place the steel bracket on the boards as shown.
- Align the holes in the steel bracket with the screw location marks in the boards.
- Insert the screws and tighten.
- Repeat for the second bracket.

